Semnox Wallmount Install Guide

Semnox Wallmount



Overview

This document is intended to assist in the installation of the Semnox Wallmount Kiosk units. Images and instructions in this document are intended to help with the installation process, but are not end all requirements. Kiosk Innovations, Inc. recommends consulting with the building Architect or Engineer prior to building modifications for installation.

Physical Dimensions

Figures 1 below shows unit dimensions and component dimensions within the wallmount kiosk. Figure 2 shows the rear of the kiosk that has the keyhole mounting points and power/data access hole. Figure 3 shows dimensions of the mounting points and the power/data access hole that will need to be prepped for mounting wallmount onto wall/surface. Figures 4 & 5 are reference pictures of a wallmount unit. Please note images and references are for informational purposes only. Kiosk Innovations, Inc. recommends consulting with the building Architect or Engineer prior to building modifications for installation.

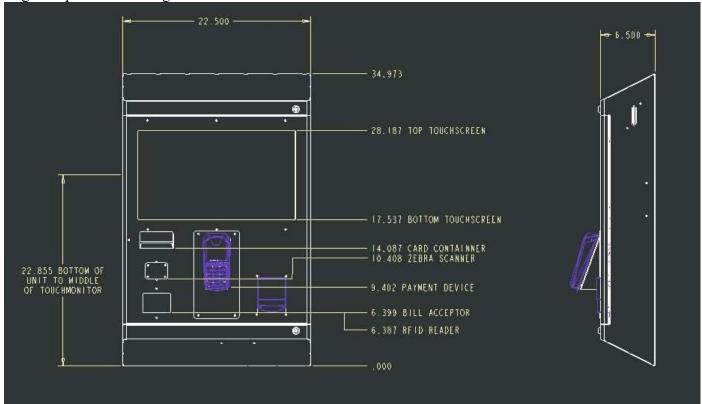


Figure 1: Kiosk Dimensions (Front/Right Side)

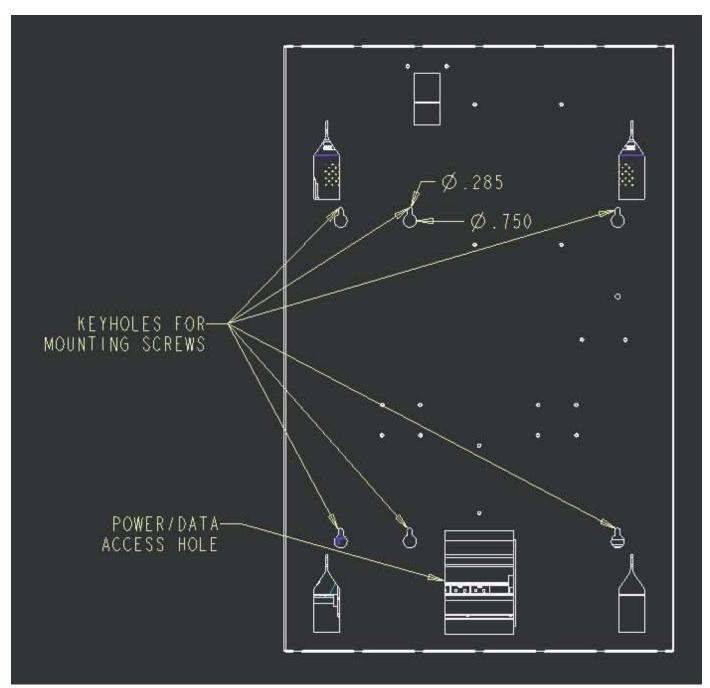


Figure 2: Rear of Kiosk

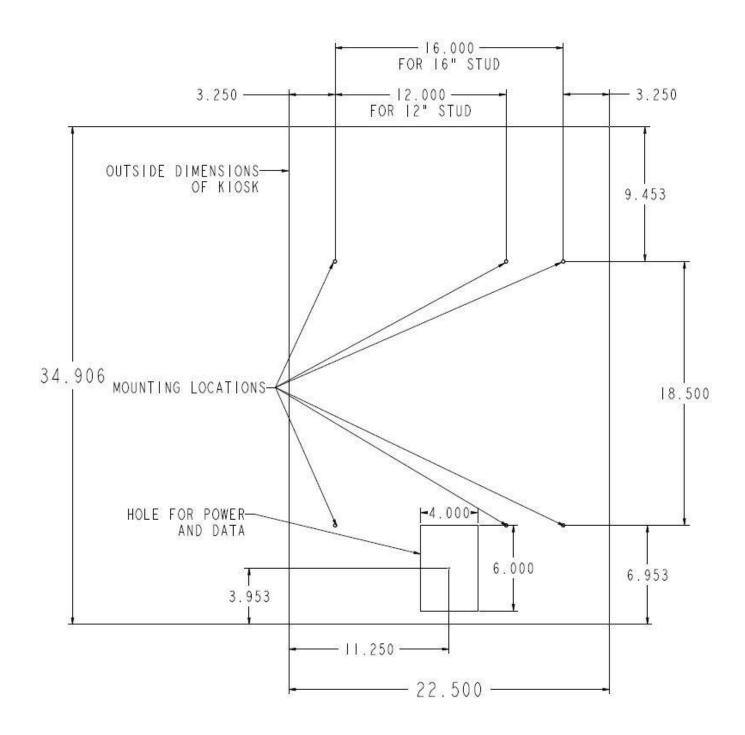


Figure 3: Mounting Dimensions

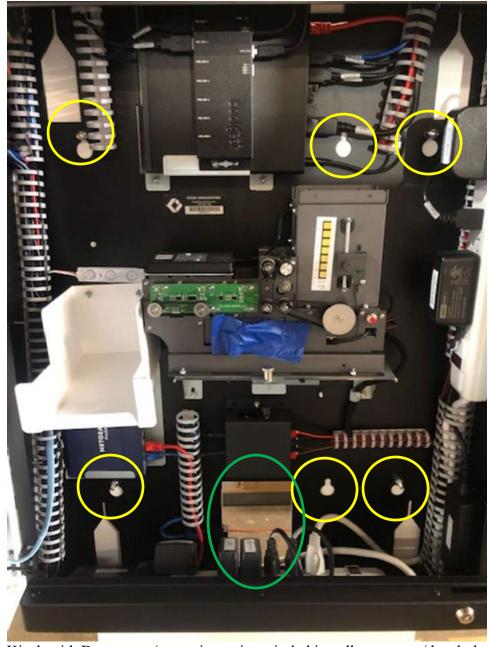


Figure 4: Kiosk with Door open (mounting points circled in yellow, power/data hole circled in green)

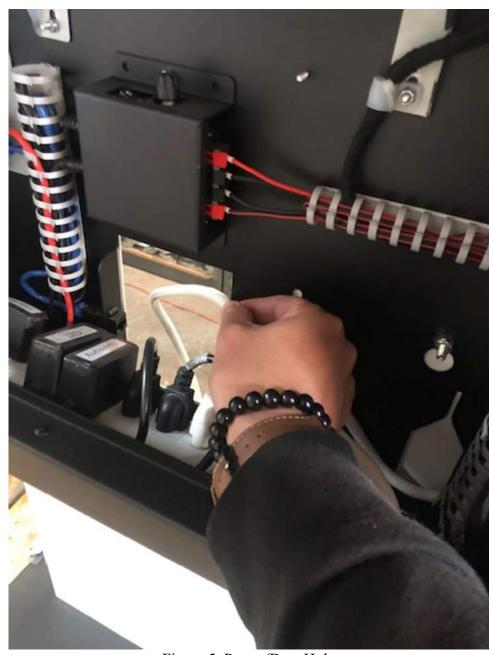



Figure 5: Power/Data Hole

Device Servicing

Card Dispenser


A. To Fill Card Dispenser:

- A1. Pull pin upwards to slide dispenser away from door
- A2. Remove the weight in the card hopper
- A3. Place cards in card hopper; ensure that card thickness dial is configured to "1.0-1.3"
- A4. Replace the weight back in the card hopper

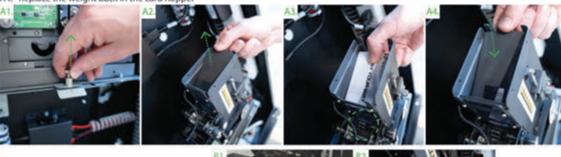

B. To Retrieve Rejected Cards: B1. Pull out drawer located on right side of device

- B2. Remove cards from the drawer
- B3. Replace drawer back into device

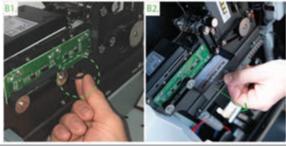

Bill Acceptor

C. Cleaning a Jam/Accessing for Cleaning:

- C1. Remove bezel by pressing in red levers on either side of the bezel, lift device upward and away from door
- C2. Be sure to not pull device too far away from door as this may damage wires or disconnect device
- C3. Open head of device by sliding red tab to the left and lift head
- C4. If needed, disengage the lozenge by depressing the grey button on the front, will allow access to below the lozenge the lozenge to clear any jams
- C5. To remove lozenge, depress button, lift and pull forward to remove from device



Figure 6: Device Service